

## **Contour Cut**

How to find a gap X & Y between Blade and Laser:

Contour cut is a function of WinPCSIGN and only work with Redsail, Saga, Teneth Expert LX, APD and Graphtec.

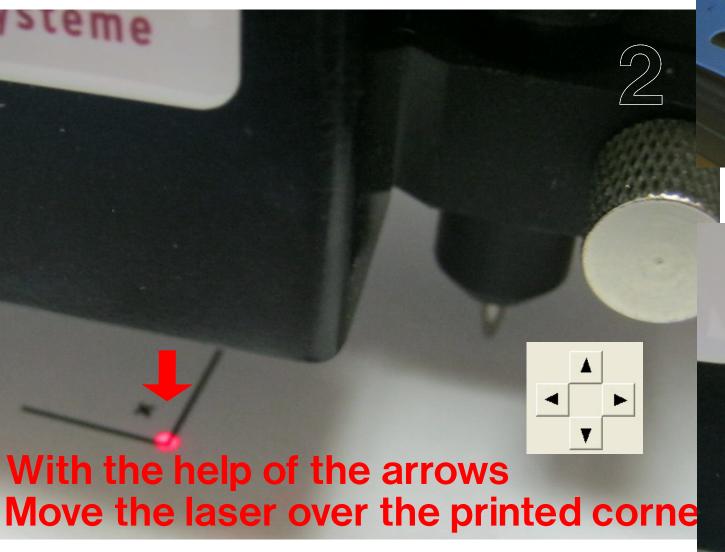

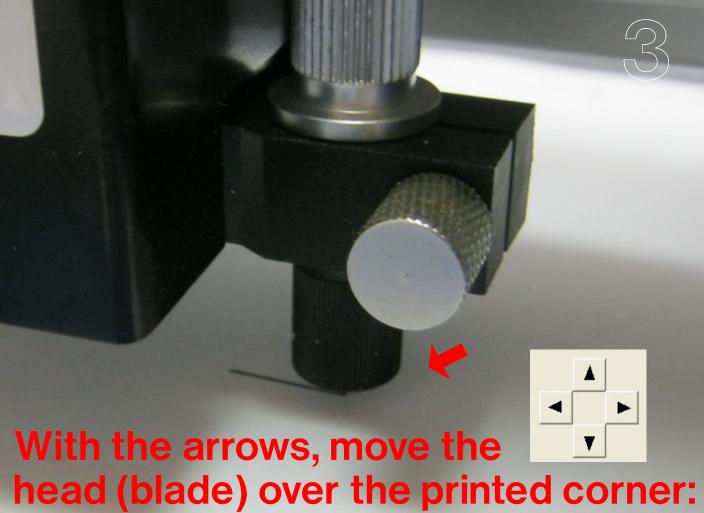

nsert your printed design with

is smaller than your cutter, we

cropmark. If your printed design

recommend to use a Cutting Mat

Copy the obtained value from Dx & Dy screen and paste to Micro Adjust: (-850,880)



Do not forget - (minus) if you got it

Click , to go to second printed corner. Use the arrow to move the laser over the second (2) corner. Press Next... and repeat same operation for last corner (3): 3

1.

To get the final gap value, return

the Laser over the printed corner:

